



## Series XC600

Digital displays for work safety  
with infrared remote control HAMA V1

Operating instructions

---

**1 Contact**

---

**www.siebert-group.com**

**GERMANY**

Siebert Industrieelektronik GmbH  
Siebertstrasse, D-66571 Eppelborn  
Phone +49 (0)6806 980-0  
email: info.de@siebert-group.com

**AUSTRIA**

Siebert Österreich GmbH  
Simmeringer Hauptstrasse 24, A-1110 Wien  
Phone +43 (0)1 74040153  
email: info.at@siebert-group.com

**FRANCE**

Siebert France Sarl  
4 rue de l'Abbé Louis Verdet, F-57200 Sarreguemines  
Phone +33 (0)3 87 98 63 68  
email: info.fr@siebert-group.com

**ITALY**

Siebert Italia Srl  
Via Galileo Galilei 2A, I-39100 Bolzano (BZ)  
Phone +39 (0)471 053753  
email: info.it@siebert-group.com

**THE NETHERLANDS**

Siebert Nederland B.V.  
Jadedreef 26, NL-7828 BH Emmen  
Phone +31 (0)591-633444  
email: info.nl@siebert-group.com

**SWITZERLAND**

Siebert AG  
Bützbergstrasse 2, CH-4912 Aarwangen  
Phone +41 (0)62 922 18 70 (german)  
+41 (0)62 922 20 44 (french)  
+41 (0)62 922 28 38 (italien)  
email: info.ch@siebert-group.com

---

## 2 Legal note

---

© Siebert Industrieelektronik GmbH

This operation manual has been prepared with the utmost care. However, we do not accept any liability for possible errors. We always appreciate your suggestions for improvement, corrections, comments and proposals. Please contact us: [editing@siebert-group.com](mailto:editing@siebert-group.com)

Siebert<sup>®</sup>, LRD<sup>®</sup> and XC-Board<sup>®</sup> are registered trademarks of Siebert Industrieelektronik GmbH. All other product names mentioned herein may be trademarks or registered trademarks of their respective owners.

We reserve the right to make alterations to the technical data and delivery options without notice. All rights reserved, including the rights of translation. No part of this document may in any form or by any means (print, photocopy, microfilm or any other process) be reproduced or by using electronic systems be processed, copied or distributed without our written permission.

---

**Table of contents**

---

<b>1 Contact</b>	<b>2</b>
<b>2 Legal note</b>	<b>3</b>
<b>3 Operating the display</b>	<b>5</b>
Meaning of the buttons .....	5
Change the shown numbers .....	6
Setting the brightness.....	7
Setting the code.....	8
Change batteries .....	8
<b>4 Troubleshooting notes</b>	<b>9</b>
The display does not answer.....	9
No remote control receipt.....	9
The remote control does not work.....	9
The remote control does not respond to all buttons.....	9

### 3 Operating the display

This manual describes how to operate displays of the XC600 series with infrared remote control.

Note: For displays with more than just number fields (e.g. additional text display, date/time or temperature) only the numeric number fields can be set with the remote control.

The operating and installation instructions for the devices are available under the following link:




[manuals.siebert-group.com/xc600](http://manuals.siebert-group.com/xc600)

The following settings can be made with the remote control:

1. Selection of a field for input
2. Change the number displayed on the selected field.  
The number can be entered directly via the numeric keypad or it can be increased or decreased by 1, using the **VOL +/-** keys. It is not possible to enter decimal numbers or negative numbers.
3. Adjusting the brightness of the entire display.

#### Meaning of the buttons

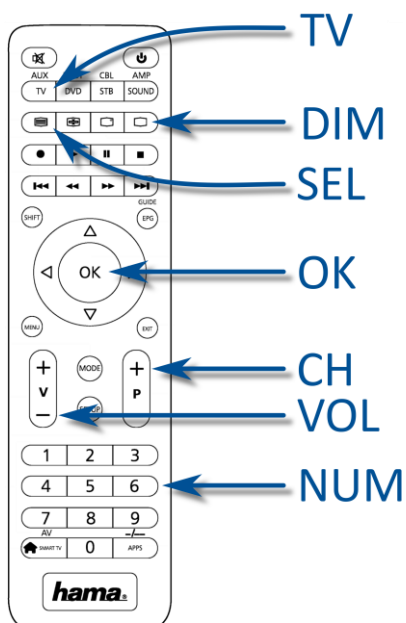

Button **TV**

Set the correct operating mode

Button **DIM**

Set or change display brightness

Button **SEL**

Selection for number entry

Button **OK**

Start and stop operation

Button **CH +/-**

Go to the next input field

Button **VOL +/-**

Increase or decrease numbers by one  
Increase or decrease the brightness


Button NUM (**1..9**)

Direct entry of numbers via the numerical keypad

All other buttons are without function


### Change the shown numbers

- Press button **TV** to activate the remote control.
- After press the button **OK** to start operation of the remote control.
- Press the button **SEL** to activate the input mode. The current input field starts flashing slowly.
- In case of several input fields use the **CH +/-** buttons to move between the fields.
- Enter the new number using the keys **1...9** on the numeric keypad. As soon as the content of a field has been changed, the flashing frequency changes. Alternatively you can increase or decrease the displayed number by one using the **VOL +/-** buttons.
- Finish operation by pressing the button **OK**. The entered values are now saved and the display restarts.

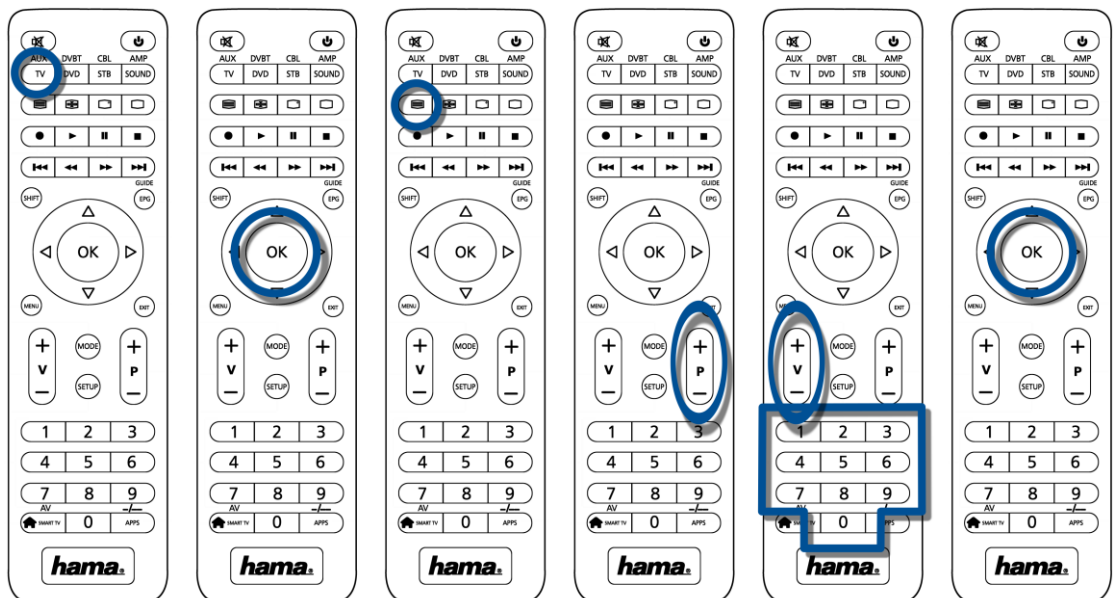

## Setting the brightness

- Press the button **TV** to activate the remote control.
- After press the button **OK** to start operation of the display.
- Press the button **DIM** for setting the brightness.
- The brightness of the display is set to the standard value. If the existing luminosity corresponds with the standard value there is no visible change in brightness.
- Increase or decrease the brightness with the button **VOL +/-**
- Finish operation by pressing the button **OK**. The set brightness is now saved and the display restarts.

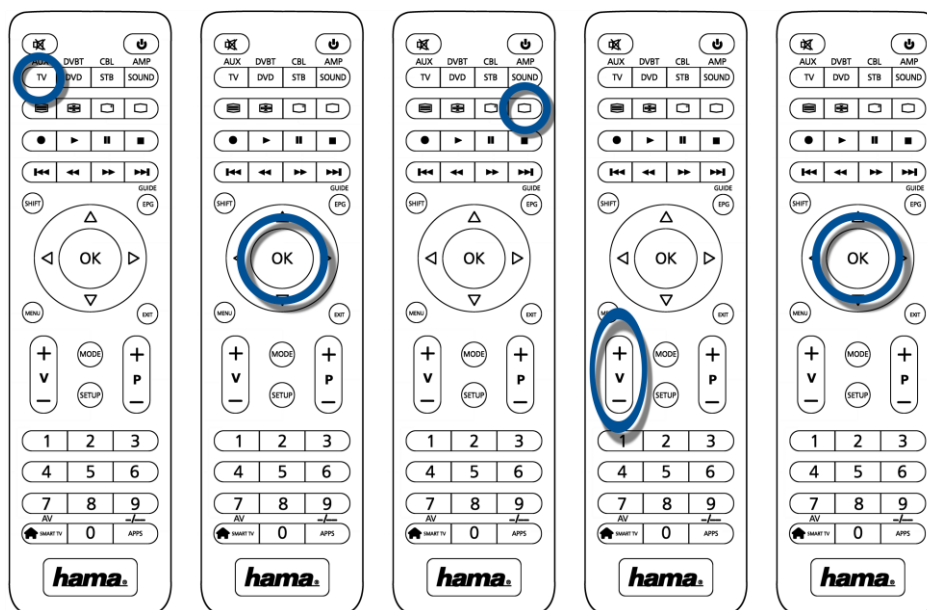


## Setting the code

The remote control is set to the device code 2711 by default. You can reset the code using the following frequency, e.g. after changing the batteries:

- Press and hold the SETUP button until the LED in the top right briefly lights up.
- Press the TV button while the LED is still lit. The LED flashes when the button is pressed.
- Press button 2. The LED flashes when the button is pressed.
- Press button 7. The LED flashes when the button is pressed.
- Press button 1. The LED flashes when the button is pressed.

Press button 1. The LED switches off after the button is pressed.

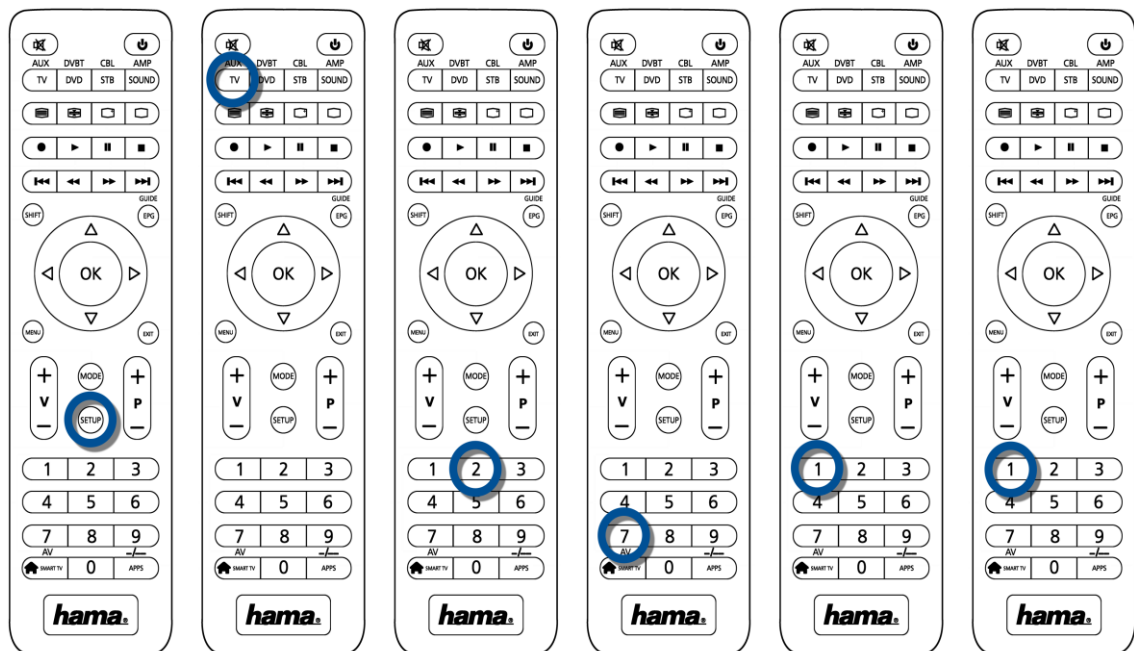

## Change batteries

The remote control requires 2 1.5 V batteries type AAA for operation. A set of batteries is included on delivery. To use the remote control remove the protection film from the battery compartment.

To change the battery open the battery compartment on the bottom side of the housing. Make sure the polarity of the batteries is correct.



---

## 4 Troubleshooting notes

---

### The display does not answer

The display or power supply is turned off.

### No remote control receipt


- The distance between display and remote control is too big. Reduce the distance to the display. The maximum range depends on various environmental circumstances, e.g. the ambient brightness. The minimum distance is approximately two meters.
- There are objects between the display and the remote control.
- The sensor in the display is dazzled by direct sunlight.

### The remote control does not work

The batteries of the remote control are either empty, inserted incorrectly or not inserted at all.

To check, press a button. If none of the remote control LEDs light up, it is likely that one of the previously described errors is the cause.

### The remote control does not respond to all buttons

Wrong mode of the remote control selected. The remote control must be in TV mode. Whenever a button is pressed the red LED next to the button  must light up.