



Operating instructions

Series S302

**Numeric large size displays
with DeviceNet interface**

1 Contact

www.siebert-group.com

GERMANY

Siebert Industrieelektronik GmbH
Siebertstrasse, D-66571 Eppelborn
P.O. Box 11 30, D-66565 Eppelborn
Phone +49 (0)6806 980-0, Fax +49 (0)6806 980-999
email info.de@siebert-group.com

AUSTRIA

Siebert Österreich GmbH
Mooslackengasse 17. A-1190 Wien
Phone +43 (0)1 890 63 86-0, Fax +43 (0)14 890 63 86-99
email info.at@siebert-group.com

FRANCE

Siebert France Sarl
33 rue Poincaré, F-57200 Sarreguemines
P.O. Box 90 334, F-57203 Sarreguemines Cédex
Phone +33 (0)3 87 98 63 68, Fax +33 (0)3 87 98 63 94
email info.fr@siebert-group.com

THE NETHERLANDS

Siebert Nederland B.V.
Jadedreef 26, NL-7828 BH Emmen
Phone +31 (0)591-633444, Fax +31 (0)591-633125
email info.nl@siebert-group.com

SWITZERALND

Siebert AG
Bützbergstrasse 2, P.O. Box 91, CH-4912 Aarwangen
Phone +41 (0)62 922 18 70, Fax +41 (0)62 922 33 37
email info.ch@siebert-group.com

2 Legal note

© Siebert Industrieelektronik GmbH

This operation manual has been prepared with the utmost care. However, we do not accept any liability for possible errors. We always appreciate your suggestions for improvement, corrections, comments and proposals. Please contact us: editing@siebert-group.com

Siebert[®], LRD[®] and XC-Board[®] are registered trademarks of Siebert Industrieelektronik GmbH. All other product names mentioned herein may be trademarks or registered trademarks of their respective owners.

We reserve the right to make alterations to the technical data and delivery options without notice. - All rights reserved, including the rights of translation. No part of this document may in any form or by any means (print, photocopy, microfilm or any other process) be reproduced or by using electronic systems be processed, copied or distributed without our written permission.

Table of contents

1 Contact	2
2 Legal note	3
3 Safety precautions	6
Important information	6
Safety	6
Intended use.....	6
Mounting and installation.....	6
Grounding.....	7
EMC measures.....	7
Disposal.....	7
4 Unit description	8
Model designation	8
Unit construction.....	8
Principle circuit diagram	9
Central Processing Unit.....	9
DeviceNet interface	10
Function inputs	10
Auxiliary voltage	10
Menu display	10
Menu buttons.....	10
Switching output	10
Status indicators	11
Power supply.....	11
5 Control	12
Data transmission.....	12
Data format.....	12
Data format INTEGER.....	12
Data format ASCII	13
Flashing	13
LED color.....	14
Blanking.....	14
Brightness.....	14
Switching output	14
Decimal point.....	14
Leading zero suppression	14
Display test	14
Demo operation mode	14

Power-on reset	14
Character set	15
6 Parametrization	16
Menu operation.....	16
Menu table	16
7 Implemented DeviceNet objects	18
8 Technical data	20
Unit properties	20
Max. power consumption	21
Measurements and weights	22

3 Safety precautions



Bus errors may result in personal injury or material damage. Therefore it must be noted that the activation of the menu may cause a bus error.

Important information

Read these operating instructions before starting the unit. They provide you with important information on the use, safety and maintenance of the units. This helps you to protect yourself and prevent damage to the unit.



Information intended to help you to avoid death, bodily harm or considerable damage to property is highlighted by the warning triangle shown here; it is imperative that this information be properly heeded.

The operating instructions are intended for trained professional electricians familiar with the safety standards of electrical technology and industrial electronics.

Store these operating instructions in an appropriate place.

The manufacturer is not liable if the information in these operating instructions is not complied with.

Safety



Components inside the units are energized with electricity during operation. For this reason, mounting and maintenance work may only be performed by professionally-trained personnel while observing the corresponding safety regulations.

The repair and replacement of components and modules may only be carried out by the manufacturer for safety reasons and due to the required compliance with the documented unit properties.

The units do not have a power switch. They are operative as soon as the operating voltage is applied.

Intended use

The units are intended for use in industrial environments. They may only be operated within the limit values stipulated by the technical data.

When configuring, installing, maintaining and testing the units, the safety and accident-prevention regulations relevant to use in each individual case must be complied with.

Trouble-free, safe operation of the units requires proper transport, storage, installation, mounting and careful operation and maintenance of the units.

Mounting and installation

The attachment options for the units were conceived in such a way as to ensure safe, reliable mounting.



The user must ensure that the attachment hardware, the unit carrier and the anchoring at the unit carrier are sufficient to securely support the unit under the given surrounding conditions.

The units are to be mounted in such a way that they can be opened up while mounted. Sufficient space for the cables must be available in the unit near the cable entries.

Sufficient space is to be kept clear around the units to ensure air circulation and to prevent the build-up of heat resulting from use. The relevant information must be heeded in the case of units ventilated by other means.



When the housing fasteners are opened, the front frame of the housing hinges out upward or downward (depending on the unit version) automatically.

Grounding

All devices are equipped with a metal housing. They comply with safety class I and require a protective earth connection. The connecting cable for the operating voltage must contain a protective earth wire of a sufficient cross section (DIN VDE 0106 part 1, DIN VDE 0411 part 1).

EMC measures

The devices comply with the EU Directive 89/336/EEC (EMC Directive) and provide the required interference immunity. Observe the following when connecting the operating voltage and data cables:

Use shielded data cables.


The data and operating voltage cables must be laid separately. They may not be laid together with heavy-current cables or other interference-producing cables.

The cable thickness must be properly assessed (DIN VDE 0100 Part 540).

The cable lengths inside the units are to be kept as short as possible to prevent interference. This applies especially to unshielded operating voltage cables. Shielded cables are also to be kept short due to any interference which might be emitted by the shielding.

Neither excessively long cables nor cable loops may be placed inside the units.

The connection of the cable shielding to the functional ground (PE) must be as short and low-impedance as possible. It should be made directly to the mounting plate over a large area with a conductive clip:

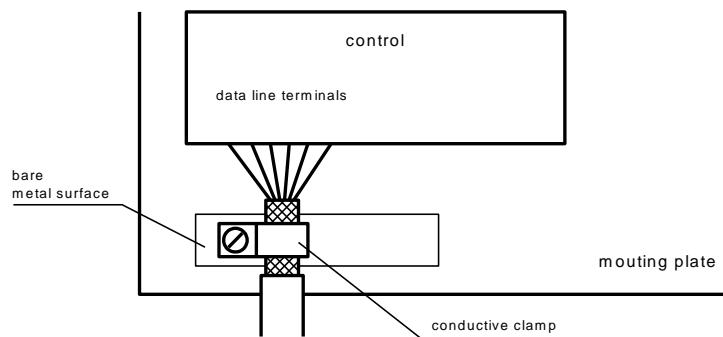

The cable shielding is to be connected at both cable ends. If equipotential bonding currents are expected due to the cable arrangement, electrical isolation is to be performed on one side. In this case, capacitive connection (approx. $0.1\mu\text{F}/600 \text{ V AC}$) of the shielding on the isolated side must occur.

Disposal

Units or unit parts which are no longer needed are to be disposed of in accordance with the regulations in effect in your country.

4 Unit description


Model designation

This manual applies to units with the following model designation (x = the 'x's in the model designation indicate the size and design of the units (see Chapter 8):


S302-xx/xx/xx-xxx/xx-YD

Unit construction

The following figure shows model type S302-05/10/xx-xxx/xx-xx as example for the other model types. The front frame of the housing is locked with quick-action releases. When opening the unit the front frame hinges downward.

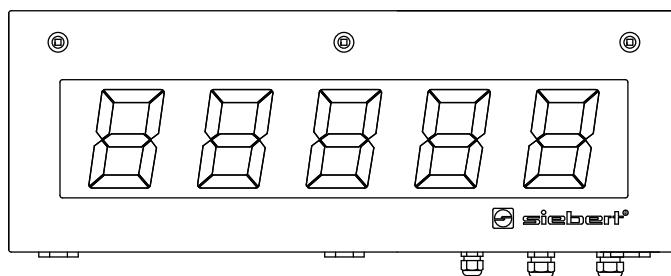


The following figure shows the unit when open.

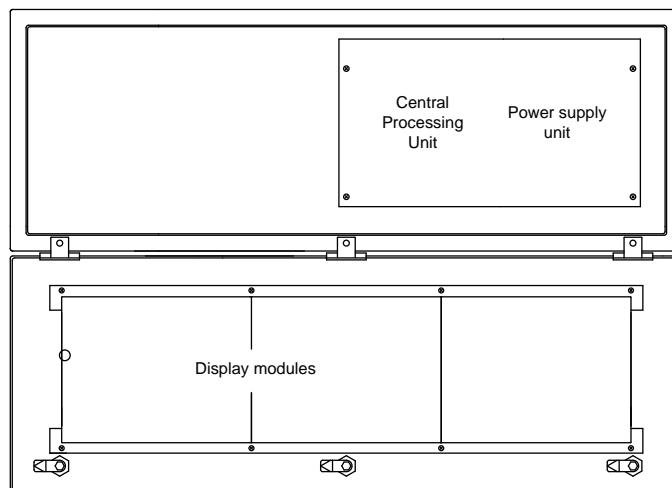

Units with double-sided display show the same information on the front and on the rear side.


Principle circuit diagram

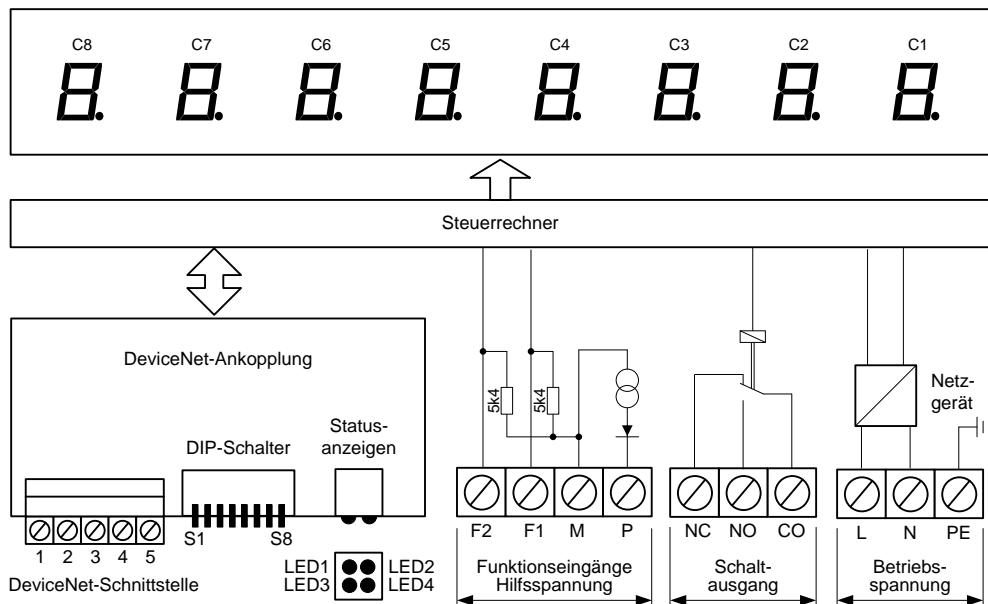

Steuerrechner	Central Processing Unit
Devicenet-Ankopplung	DeviceNet coupling
DIP-Schalter	DIP switch
Statusanzeigen	Status indicators
DeviceNet-Schnittstelle	DeviceNet interface
Funktionseingänge	Function inputs
Hilfsspannung	Auxiliary voltage
Schaltausgang	Switching output
Betriebsspannung	Power supply
Netzgerät	Power supply unit

Central Processing Unit

The following figure shows the Central Processing Unit, located in the lower part of the housing.

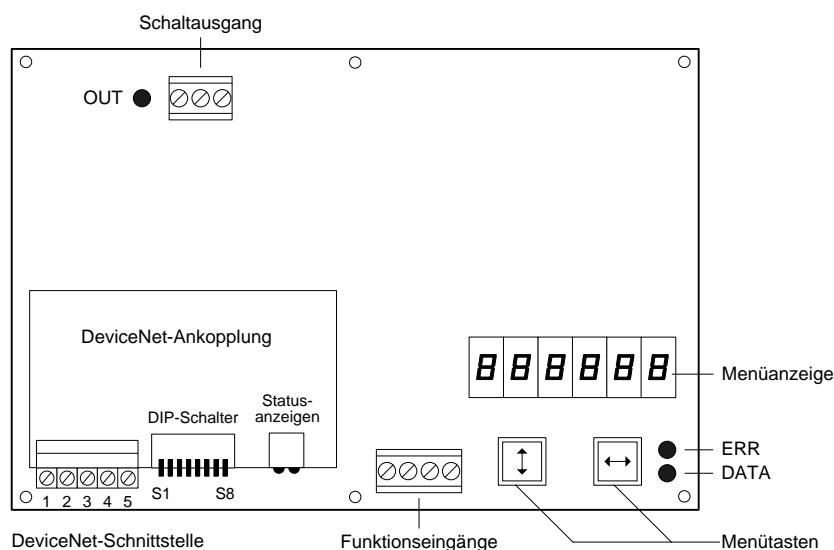

Schaltausgang	Switching output
DeviceNet-Ankopplung	DeviceNet coupling
DIP-Schalter	DIP switch
Statusanzeigen	Status indicators
DeviceNet-Schnittstelle	DeviceNet interface
Funktionseingänge	Function inputs
Menütasten	Menu buttons
Menüanzeige	Menu display

DeviceNet interface

The DeviceNet interface is located on the screw-type terminal strip of the DeviceNet coupling. It is galvanically isolated and has the following meaning:

Terminal 1	COM
Terminal 2	CAN_L
Terminal 3	Shield
Terminal 4	CAN_H
Terminal 5	V+ (24V)

The devices are DeviceNet slaves in accordance with EN 50325-4 corresponding to specification CiA-301 V4.02. They support the objects of the *Standard Object Directory*.

The DeviceNet coupling corresponds with unit profile 12 (communications adapter).

The EDS data file is included in delivery.

The address of the unit (MAC ID) is set in menu item Ad (see Chapter 7).

The baud rate is set in menu item Br (see Chapter 7).

Function inputs

The function inputs are located on the screw-type terminal strip of the control computer. They allow reduction in brightness and flashing of the display, independently of commands via the DeviceNet interface (see Chapter 5).

The function inputs are designed for the following signal voltages:

Signal voltage: L = -3.5...+5 V (open input = L)
H = +18...30 V (active H), M = reference potential

Auxiliary voltage

The units supply terminal P with an auxiliary voltage galvanically isolated from the operating voltage (24 V ± 20%, max. 50 mA, M = reference potential). It can be used for supplying power to the current loop or as H signal for the function inputs.

Menu display

The parameterization of the units is carried out in a menu of the menu display (see Chapter 6). In normal mode, the menu display corresponds to the main display. For devices with more than six positions, *OnlinE* is shown in the menu display in normal operation.

Menu buttons

The menu buttons are used to control the menu (see Chapter 7).

Switching output

The devices dispose of a switching output (relay) with potential-free make contact (NC, NO, CO).

Status indicators

The status indicators (LEDs) of the control computer and the DeviceNet coupling have the following meaning:

LED1	No meaning	
LED2	Flashing Lightning:	Connection to a DeviceNet bus system Connection to a DeviceNet master
LED3	No meaning	
LED4	Green Flashing green Flashing red	Unit ready Parameterized data length is not correct Baud rate mistake or address conflict
DATA	Data receipt	
ERR	No meaning	
OUT	Switching output active	

Other status information (LED1...LED4) are of no meaning.

Power supply

The screw-type terminals for the power supply are located on the power supply unit in the bottom section of the housing. They have the following designations:

Devices for a power supply 115 V AC or 230 V AC	L, N and PE
Devices for a power supply 24 V DC	+,- and PE

5 Control



Bus errors may result in personal injury or material damage. Therefore it must be noted that the activation of the menu may cause a bus error.

Data transmission

The data is transmitted to the output data area of the unit. The unit produces no input data.

Data format

The data format for the evaluation of DeviceNet data is set in menu item 1 (see Chapter 6).

Data format INTEGER

The data is transmitted with 4 bytes.

Byte 0 contains the formatting of the display and the control of the switching output. The following bytes contain the indicator value in INTEGER format.

	Byte 0	Byte 1	Byte 2	Byte 3
UI16/SI16	7 6 5 4 3 2 1 0	7 6 5 4 3 2 1 0	7 6 5 4 3 2 1 0	7 6 5 4 3 2 1 0
UI24/SI24	7 6 5 4 3 2 1 0	7 6 5 4 3 2 1 0	7 6 5 4 3 2 1 0	7 6 5 4 3 2 1 0
	Formatting	Reserved	MSB	LSB
	Byte 0	Byte 1	Byte 2	Byte 3
	7 6 5 4 3 2 1 0	7 6 5 4 3 2 1 0	7 6 5 4 3 2 1 0	7 6 5 4 3 2 1 0
	Formatting	MSB		LSB
	:	:	:	:
	:	0 0 0	No decimal point	MSB: Most Significant Byte
	:	0 0 1	Decimal point digit C2	
	:	0 1 0	Decimal point digit C3	LSB: Least Significant Byte
	:	0 1 1	Decimal point digit C4	
	:	1 0 0	Decimal point digit C5	
	:	1 0 1	Decimal point digit C6	
	:	1 1 0	Decimal point digit C7	
	:	1 1 1	Decimal point digit C8	
	:	:		
	:	0	Deactivate switching output (Relais off)	
	:	1	Activate switching output (Relais on)	
	:	:		
	:	0	Normal brightness	
	:	1	Reduced brightness (only devices with LED display)	
	:	:		
	:	0	Flashing off	
	:	1	Flashing on (only devices with LED display)	
	:	:		
0	0	Blanking off	Valid for units with monochrome LED display or LRD® display	
0	1	Blanking on		
1	0	Reserved		
:	:	:		
0	0	LED color red	Valid for units with switchable LED color	
0	1	LED color green		
1	0	LED color orange		
:	:	:		
1	1	Display test		

Depending on the operation mode chosen there are the following maximum display areas:

UI16	0...65535
SI16	-32768...32767
UI24	0...16777215
SI24	-8388608...8388607

The display shows a □ (overflow) in case of a display overrange or a ▲ (underflow) in case of any display underrange.

Data format ASCII

The data is transmitted using a number of bytes depending on the number of digits of the device.

Byte 0 contains the formatting of the display and the control of the switching output. The following bytes contain the indicator value in ASCII format (C8...C1).

Flashing

If in byte 0 bit 5 is set, the whole display flashes

Flashing of the display can also be activated by application of the H signal to function input F1 (priority over bit 5 in byte 0).

For devices with LCD® display flashing is not possible

LED color

The LED color can be defined in byte 0 with bit 7 and bit 6 (only for units with switchable LED color).

Blanking

If in byte 0 bit 6 is set, the display will be blank (priority over flashing; not possible for devices with switchable LED color).

Brightness

If in byte 0 bit 4 is set the brightness of the display will be reduced

The brightness can be reduced with an H signal on function input F2 (Priority over bit 4 in byte 0).

For units provided with a LRD® display brightness reduction is not possible.

Switching output

The units have a switching output (relay) with a potential free changeover contact (NC, NO, CO).

If in menu point r the setting is OFF the switching output can be activated by setting bit 3 in byte 0.

If in menu point r A1, A2 or A4 is set receiving modified data generates a wipe impulse at the switching output of 1, 2 or 4 seconds duration.

The wipe function is suitable p. e. for controlling optical and acoustic signal generators.

When the switching output is active the status indicator OUT of the Central Processing Unit is lightening.

Decimal point

You can set a decimal point in menu item A.

The decimal point can also be controlled by setting the bits 2...0 in byte 0. In menu item A, the setting 0 (no fixed decimal point) is to be selected.

A decimal point set in menu item A has priority.

Units with LRD® display have no decimal points.

Leading zero suppression

In menu item C it is set if leading zeros are to be displayed or suppressed.

Display test

In menu item F, you can set whether a display test is to be performed after the operating voltage is applied.

The display test can also be activated by setting bits 7 and 6 in byte 0.

The display test has priority over flashing and blanking.

Demo operation mode

If the setting *PLRY* is selected in menu item F, random characters are displayed. In this case, it is impossible to control the unit.

Power-on reset

After power-on, minus signs are displayed to signalize that the unit is ready for operation. If a display test has been preselected in menu item F, it will run beforehand.

Character set

20/2B	2D	30	31	32	33	34	35	36	37	38	39	2C/2E
-	□	l	ě	ž	č	ř	š	ň	ł	ń	ğ	.
41/61	42/62	43	44/64	45/65	46/66	47/67	48	49	4A/6A	4C/6C	50/70	55
R	b	C	d	E	F	G	H	I	J	L	P	U
59/79	5F	63	68	69	4E/6E	4F/6F	52/72	54/74	75	58/78	other	
Y	-	c	h	i	n	o	r	t	u	o	é	

6 Parametrization



Bus errors may result in personal injury or material damage. Therefore it must be noted that the activation of the menu may cause a bus error.

Menu operation

To start the menu, press both menu buttons simultaneously (approx. 1 sec.) until the first menu item appears in the menu display. It is now possible to navigate in the menu as follows:

Next menu item	Shortly press key [$\uparrow\downarrow$]
Page menu items forward	Press key [$\uparrow\downarrow$] long
Previous menu item	Double-click on key [$\uparrow\downarrow$]
Page menu items backward	Double-click on key [$\uparrow\downarrow$] and keep it pressed
Next setting	Shortly press key [\leftrightarrow]
Page settings forward	Press key [\leftrightarrow] long
Previous setting	Double-click on key [\leftrightarrow]
Page setting backward	Double-click on key [\leftrightarrow] and keep it pressed

To exit the menu shortly press the key [$\uparrow\downarrow$] in menu item U. Depending on the setting in menu item U the settings made are either saved (set) or not saved (escape) or the factory settings are reset (default).

Cancelling the menu without saving the settings made is possible by pressing both menu buttons simultaneously (approx. 1 sec.). It will occur automatically if 60 seconds pass without a menu button being pressed.

Once the menu is closed, the device behaves in the same manner as when the operating voltage was applied.

In the menu mode the character Ξ appears in the main display. Control of the display is not possible in menu mode.

Menu table

The menu items are displayed in the following menu table. The factory settings are marked with an *. Individual menu items or settings can be suppressed in another menu item, depending on the unit version or setting.

Menu item	Settings	Display
	Unsigned Integer 16 Bit*	I U I 16
	Signed Integer 16 Bit	I S I 16
	Unsigned Integer 24 Bit	I U I 24
	Signed Integer 24 Bit	I S I 24
	ASCII	I RSC
Ad Address (Mac-ID)	0*	Rd 00
	↓	↓
	63	Rd 63
Br Baud rate	125 kbps*	br 125
	250 kbps	br 250
	500 kbps	br 500
r Switching output	No wiping pulse*	r OFF
	Wiping pulse 1 sec.	r RI
	Wiping pulse 2 sec.	r R2

	Wiping pulse 4 sec.	r	R4
A	Decimal point	No decimal point*	R D
		Decimal point digit C1	R L
		Decimal point digit C2	R Z
		↓	↓
		Decimal point digit C8	R B
C	Leading zeros	Leading zeros not displayed*	C DD
		Leading zeros displayed	C 0000
F	Display test	No display test at power-on*	F - - -
		Display test at power-on	F 8888
		Demo operation mode	F PLAY
U	Save	Save parameters* (Set)	U SEL
		Not saving parameters (Escape)	U ESC
		Restore to factory settings (Default)	U dEF

7 Implemented DeviceNet objects

Identity Object, Class 01h

	#	Name	Access	Type	Default, min, max	Description
Class attributes	01h	Revision	Get	UINT	1, 1, 1	Revision of identity object
Instance attributes	01h	Vendor ID	Get	UINT	90	005Ah (HMS-Networks)
	02h	Device type	Get	UINT	12	000Ch (Comm. adapter)
	03h	Product code	Get	UINT	12	000Ch (Anybus-S)
	04h	Revision	Get	USINT, USINT	{1, 1}	Major/minor fieldbus version
	05h	Status	Get	WORD	0, 0, 255	Device status
	06h	Serial number	Get	UDINT	-	Assigned at manufacturing
	07h	Product name	Get	SHORT_STRING		AnyBus-S DeviceNet

Message Router, Class 02h

	#	Name	Access	Type	Default, min, max	Description
Class attributes	01h	Revision	Get	UINT	1, 1, 1	Revision of identity object

DeviceNet Object, Class 03h

	#	Name	Access	Type	Default, min, max	Description
Class attributes	01h	Revision	Get	UINT	2, 2, 2	Revision of identity object
Instance attributes	01h	MAC ID	Get	USINT	-	Currently used MAC ID of the device
	02h	Baudrate	Get	USINT	-	1 = 125 kBaud 2 = 250 kBaud 3 = 500 kBaud
	05h	Allocation information	Get	BYTE, USINT	-	Allocation choice Byte & Master MAC ID

Assembly Object, Class 04h

	#	Name	Access	Type	Default, min, max	Description
Class attributes	01h	Revision	Get	UINT	1, 1, 1	Revision of identity object
Input area, instance 64h	03h	Data	Get	Array of USINT	-	Data produced by the device to the master
Output area, instance 96h	03h	Data	Get	Array of USINT	-	Data consumed by the device from the master

DeviceNet Connection Object, Class 05h

	#	Name	Access	Type	Default, min, max	Description
Class attributes	01h	Revision	Get	UINT	2, 2, 2	Revision of identity object
Explicit messaging connection, instance 01h	01h	State	Get	USINT	1, 0, 5	0 = non existent 1 = configuring 3 = established 4 = timed out

					5 =deferred delete
	02h	Instance type	Get	USINT	0, 0, 0
					Explicit messaging
Polled I/O connection, instance 02h	01h	State	Get	USINT	1, 0, 4 0 = non existent 1 = configuring 3 = established 4 = timed out
	02h	Instance type	Get	USINT	1, 0, 1
					I/O connection
Bit-Strobe connection, instance 03h	01h	State	Get	USINT	1, 0, 4 0 = non existent 1 = configuring 3 = established 4 = timed out
	02h	Instance type	Get	USINT	1, 0, 1
					I/O connection
Change of state / Cyclic connection, instance 04h	01h	State	Get	USINT	1, 0, 4 0 = non existent 1 = configuring 3 = established 4 = timed out
	02h	Instance type	Get	USINT	1, 0, 1
					I/O connection

Acknowledge Handler Object, Class 2Bh

#	Name	Access	Type	Default, min, max	Description
Class attributes					
	01h Revision	Get	UINT	1, 1, 1	Revision of identity object
	02h Max instance	Get	UINT	-	Max instance number
Instance attributes					
	01h Acknowledge timer	Get/Se t	UINT	16, 1, 65535	Time to wait for acknowledge before resending (ms)
	02h Retry limit	Get/Se t	USINT	1, 0, 255	Number of Ack timeouts before retry limit reached event
	03h Producing connection instance	Get/Se t	UINT	-	Connection instance con- taining the path of the producing IO application object
	04h Ack list size	Get	Byte	-	Max number of members in Ack list; 0 = dynamic
	05h Ack list	Get	Array of USINT	-	List of active connection instances receiving Ack's
	06h Data with ack path list size	Get	Byte	-	Max number of members in Data with Ack path list; 0 = dynamic
	07h Data with ack path list	Get	Array of USINT	-	List of connection instance/consuming application object pairs

8 Technical data

Unit properties

The model designation is structured as follows:

S302	-	[] []	/	[] []	/	[] []	-	[] [] []	/	[] []	-	[] []
:	:	:	:	:	:	:	:	:	:	:	:	:
No dimension symbol	0	:	:	:	:	:	:	:	:	:	:	:
Dimension symbol	F	:	:	:	:	:	:	:	:	:	:	:
1 Digit	1	:	:	:	:	:	:	:	:	:	:	:
2 Digits	2	:	:	:	:	:	:	:	:	:	:	:
↓	↓	:	:	:	:	:	:	:	:	:	:	:
8 Digits	8	:	:	:	:	:	:	:	:	:	:	:
Character height 25 mm	0 3	:	:	:	:	:	:	:	:	:	:	:
Character height 57 mm	0 6	:	:	:	:	:	:	:	:	:	:	:
Character height 100 mm	1 0	:	:	:	:	:	:	:	:	:	:	:
Character height 160 mm	1 6	:	:	:	:	:	:	:	:	:	:	:
Character height 250 mm	2 5	:	:	:	:	:	:	:	:	:	:	:
LED Standard	0	:	:	:	:	:	:	:	:	:	:	:
LED, SMD technology	..	:	:	:	:	:	:	:	:	:	:	:
LED for outdoor use	2	:	:	:	:	:	:	:	:	:	:	:
LRD®	4	:	:	:	:	:	:	:	:	:	:	:
Character color red	R	:	:	:	:	:	:	:	:	:	:	:
Character color green	G	:	:	:	:	:	:	:	:	:	:	:
Character color white	W	:	:	:	:	:	:	:	:	:	:	:
Character color red/green/orange switchable	M	:	:	:	:	:	:	:	:	:	:	:
Display readable on one side	1	:	:	:	:	:	:	:	:	:	:	:
Display readable on both sides	2	:	:	:	:	:	:	:	:	:	:	:
Steel sheet housing, coated	0	:	:	:	:	:	:	:	:	:	:	:
Steel sheet housing, bilayer painting	1	:	:	:	:	:	:	:	:	:	:	:
Stainless steel housing V2A, coated	2	:	:	:	:	:	:	:	:	:	:	:
Stainless steel housing V2A, brushed	3	:	:	:	:	:	:	:	:	:	:	:
Stainless steel housing V4A, brushed	5	:	:	:	:	:	:	:	:	:	:	:
Protection type IP54	0	:	:	:	:	:	:	:	:	:	:	:
Protection type IP65	1	:	:	:	:	:	:	:	:	:	:	:
Protection type IP54 with climate adjustment	2	:	:	:	:	:	:	:	:	:	:	:
Protection type IP54 with climate adjustment and heating	4	:	:	:	:	:	:	:	:	:	:	:
Wall mounting, cable entry point from the bottom	0	:	:	:	:	:	:	:	:	:	:	:
Wall mounting, cable entry point from the top	1	:	:	:	:	:	:	:	:	:	:	:
Hanging installation, cable entry point from the bottom	2	:	:	:	:	:	:	:	:	:	:	:
Hanging installation, cable entry point from the top	3	:	:	:	:	:	:	:	:	:	:	:
Wall mounting and hanging installation, cable entry point from the bottom	4	:	:	:	:	:	:	:	:	:	:	:
Wall mounting and hanging installation, cable entry point from the top	5	:	:	:	:	:	:	:	:	:	:	:
Power supply 230 V AC ±15 %, 50 Hz	A	:	:	:	:	:	:	:	:	:	:	:
Power supply 24 V DC ±15 %	B	:	:	:	:	:	:	:	:	:	:	:
Power supply 115 V AC ±15 %, 60 Hz	C	:	:	:	:	:	:	:	:	:	:	:
Interface	x	x	:	:	:	:	:	:	:	:	:	:

Max. power consumption

Units with one-sided display	[VA] ¹⁾
1 digit	
S302-x1/10/xx-1xx/xx-xx	12 (50)
S302-x1/16/xx-1xx/xx-xx	22 (50)
S302-x1/25/xx-1xx/xx-xx	26
2 digits	
S302-x2/06/xx-1xx/xx-xx	12
S302-x2/10/xx-1xx/xx-xx	15 (50)
S302-x2/16/xx-1xx/xx-xx	37 (50)
S302-x2/25/xx-1xx/xx-xx	46
3 digits	
S302-x3/06/xx-1xx/xx-xx	13
S302-x3/10/xx-1xx/xx-xx	17 (50)
S302-x3/16/xx-1xx/xx-xx	51 (50)
S302-x3/25/xx-1xx/xx-xx	63
4 digits	
S302-x4/06/xx-1xx/xx-xx	14
S302-x4/10/xx-1xx/xx-xx	21 (50)
S302-x4/16/xx-1xx/xx-xx	64 (50)
S302-x4/25/xx-1xx/xx-xx	79
5 digits	
S302-x5/06/xx-1xx/xx-xx	15
S302-x5/10/xx-1xx/xx-xx	23 (50)
S302-x5/16/xx-1xx/xx-xx	77 (50)
S302-x5/25/xx-1xx/xx-xx	96
6 digits	
S302-x6/03/xx-1xx/xx-xx	16
S302-x6/06/xx-1xx/xx-xx	16
S302-x6/10/xx-1xx/xx-xx	26 (50)
S302-x6/16/xx-1xx/xx-xx	91 (50)
S302-x6/25/xx-1xx/xx-xx	113
7 digits	
S302-x7/06/xx-1xx/xx-xx	17
S302-x7/10/xx-1xx/xx-xx	30 (50)
S302-x7/16/xx-1xx/xx-xx	104 (50)
S302-x7/25/xx-1xx/xx-xx	130
8 digits	
S302-x8/06/xx-1xx/xx-xx	18
S302-x8/10/xx-1xx/xx-xx	32 (50)

Units with double-sided display	[VA] ¹⁾
1 digit	
S302-x1/10/xx-2xx/xx-xx	16 (91)
S302-x1/16/xx-2xx/xx-xx	35 (91)
S302-x1/25/xx-2xx/xx-xx	42
2 digits	
S302-x2/06/xx-2xx/xx-xx	15
S302-x2/10/xx-2xx/xx-xx	21 (91)
S302-x2/16/xx-2xx/xx-xx	66 (91)
S302-x2/25/xx-2xx/xx-xx	83
3 digits	
S302-x3/06/xx-2xx/xx-xx	17
S302-x3/10/xx-2xx/xx-xx	26 (91)
S302-x3/16/xx-2xx/xx-xx	92 (91)
S302-x3/25/xx-2xx/xx-xx	116
4 digits	
S302-x4/06/xx-2xx/xx-xx	19
S302-x4/10/xx-2xx/xx-xx	33 (91)
S302-x4/16/xx-2xx/xx-xx	119 (91)
S302-x4/25/xx-2xx/xx-xx	150
5 digits	
S302-x5/06/xx-2xx/xx-xx	21
S302-x5/10/xx-2xx/xx-xx	38 (91)
S302-x5/16/xx-2xx/xx-xx	146 (91)
S302-x5/25/xx-2xx/xx-xx	184
6 digits	
S302-x6/03/xx-2xx/xx-xx	23
S302-x6/06/xx-2xx/xx-xx	23
S302-x6/10/xx-2xx/xx-xx	43 (91)
S302-x6/16/xx-2xx/xx-xx	173 (91)
S302-x6/25/xx-2xx/xx-xx	217
7 digits	
S302-x7/06/xx-2xx/xx-xx	25
S302-x7/10/xx-2xx/xx-xx	51 (91)
S302-x7/16/xx-2xx/xx-xx	200 (91)
S302-x7/25/xx-2xx/xx-xx	250
8 digits	
S302-x8/06/xx-2xx/xx-xx	27
S302-x8/10/xx-2xx/xx-xx	55 (91)

¹⁾ The values given are approximate values. For units with built-in heating, the values for power consumption specified in the table increase by approx. 10 – 100 VA (exact values on request), depending on the unit size.


() Values in parentheses are valid for LRD[®] versions.

The power consumption for the unit version model S302-xx/xx/0x-xxx/xx-xx is also valid for the unit version S302-xx/xx/2x-xxx/xx-xx (LEDs for external use).

Measurements and weights

Units with one-side display

The following figure shows unit versions S302-04/10/4x-1xx/xx-xx and S302-F3/10/4x-1xx/xx-, representing the other unit versions listed in the following table.

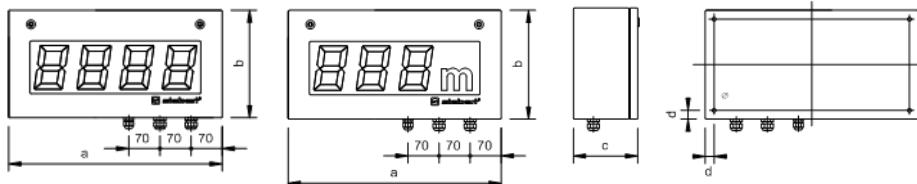

	a [mm]	b [mm]	c [mm]	d [mm]	Ø [mm]	Weight [kg] ¹⁾
1 digit						
S302-01/10/xx-1xx/xx-xx	330 ²⁾	245	110 (145)	16	7	6 (7) ²⁾
S302-01/16/xx-1xx/xx-xx	390	300	110 (145)	20	9	7 (9)
S302-01/25/xx-1xx/xx-xx	570	400	110	20	9	11
2 digits	1 digit + dimension symbol					
S302-02/06/xx-1xx/xx-xx	-	300 ³⁾	185	110	16	7
S302-02/10/xx-1xx/xx-xx	S302-F1/10/xx-1xx/xx-xx	330 ²⁾	245	110 (145)	16	7
S302-02/16/xx-1xx/xx-xx	S302-F1/16/xx-1xx/xx-xx	390	300	110 (145)	20	9
S302-02/25/xx-1xx/xx-xx	S302-F1/25/xx-1xx/xx-xx	570	400	110	20	9
3 digit	2 digit + dimension symbol					
S302-03/06/xx-1xx/xx-xx	S302-F2/06/xx-1xx/xx-xx	300 ³⁾	185	110	16	7
S302-03/10/xx-1xx/xx-xx	S302-F2/10/xx-1xx/xx-xx	480	245	110 (145)	16	7
S302-03/16/xx-1xx/xx-xx	S302-F2/16/xx-1xx/xx-xx	670	300	110 (145)	20	9
S302-03/25/xx-1xx/xx-xx	S302-F2/25/xx-1xx/xx-xx	1030	400	110	20	9
4 digit	3 digit + dimension symbol					
S302-04/06/xx-1xx/xx-xx	S302-F3/06/xx-1xx/xx-xx	300 ³⁾	185	110	16	7
S302-04/10/xx-1xx/xx-xx	S302-F3/10/xx-1xx/xx-xx	480	245	110 (145)	16	7
S302-04/16/xx-1xx/xx-xx	S302-F3/16/xx-1xx/xx-xx	670	300	110 (145)	20	9
S302-04/25/xx-1xx/xx-xx	S302-F3/25/xx-1xx/xx-xx	1030	400	110	20	9
5 digit	4 digit + dimension symbol					
S302-05/03/xx-1xx/xx-xx	-	300 ³⁾	185	110	16	7
S302-05/06/xx-1xx/xx-xx	S302-F4/06/xx-1xx/xx-xx	400	185	110	16	7
S302-05/10/xx-1xx/xx-xx	S302-F4/10/xx-1xx/xx-xx	680	245	110 (145)	16	7
S302-05/16/xx-1xx/xx-xx	S302-F4/16/xx-1xx/xx-xx	960	300	110 (145)	20	9
S302-05/25/xx-1xx/xx-xx	S302-F4/25/xx-1xx/xx-xx	1500	400	110	20	9
6 digit	5 digit + dimension symbol					
S302-06/03/xx-1xx/xx-xx	S302-F5/03/xx-1xx/xx-xx	300 ³⁾	185	110	16	7
S302-06/06/xx-1xx/xx-xx	S302-F5/06/xx-1xx/xx-xx	400	185	110	16	7
S302-06/10/xx-1xx/xx-xx	S302-F5/10/xx-1xx/xx-xx	680	245	110 (145)	16	7
S302-06/16/xx-1xx/xx-xx	S302-F5/16/xx-1xx/xx-xx	960	300	110 (145)	20	9
S302-06/25/xx-1xx/xx-xx	S302-F5/25/xx-1xx/xx-xx	1500	400	110	20	9
7 digit	6 digit + dimension symbol					
-	S302-F6/03/xx-1xx/xx-xx	300 ³⁾	185	110	16	7
S302-07/06/xx-1xx/xx-xx	S302-F6/06/xx-1xx/xx-xx	510	185	110	16	7
S302-07/10/xx-1xx/xx-xx	S302-F6/10/xx-1xx/xx-xx	870	245	110 (145)	16	7
S302-07/16/xx-1xx/xx-xx	S302-F6/16/xx-1xx/xx-xx	1100	300	110 (145)	20	9
S302-07/25/xx-1xx/xx-xx	S302-F6/25/xx-1xx/xx-xx	1730	400	110	20	9
8 digit	7 digit + dimension symbol					
S302-08/06/xx-1xx/xx-xx	S302-F7/06/xx-1xx/xx-xx	510	185	110	32	7
S302-08/10/xx-1xx/xx-xx	S302-F7/10/xx-1xx/xx-xx	870	245	110 (145)	32	7
						12 (14)

¹⁾ The figures shown for weight are approximate.


²⁾ Units with Profibus interface: a = 480 mm, Weight = 8 (9) kg

³⁾ Units with Profibus interface or integrated heating: a = 400 mm, Weight = 6 kg;
Units with Profibus interface and integrated heating: a = 510 mm, Weight = 7 kg

() Values in round brackets are valid for LRD® versions.

Units with double-side display

The following figure shows unit versions S302-04/10/4x-2xx/xx-xx and S302-F3/10/4x-2xx/xx-, representing the other unit versions listed in the following table.

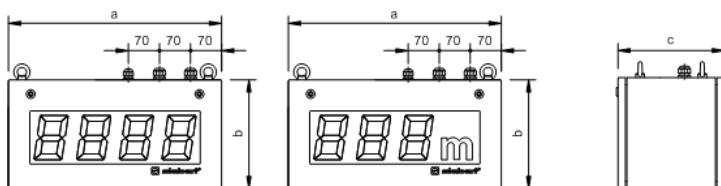

Units with character height of 25 mm (S302-xx/03/xx-2xx/xx-xx) and 57 mm (S302-xx/06/xx-2xx/xx-xx) are provided with 2 eyes instead of 4.

		a [mm]	b [mm]	c [mm]	Weight [kg] ¹⁾
1 digit					
S302-01/10/xx-2xx/xx-xx		330 ²⁾	245	170 (240)	9 (11) ²⁾
S302-01/16/xx-2xx/xx-xx		390	300	170 (240)	11 (12)
S302-01/25/xx-2xx/xx-xx		570	400	170	17
2 digit	1 digit + dimension symbol				
S302-02/06/xx-2xx/xx-xx	-	300 ³⁾	185	170	7 ³⁾
S302-02/10/xx-2xx/xx-xx	S302-F1/10/xx-2xx/xx-xx	330 ²⁾	245	170 (240)	9 (9) ²⁾
S302-02/16/xx-2xx/xx-xx	S302-F1/16/xx-2xx/xx-xx	390	300	170 (240)	11 (11)
S302-02/25/xx-2xx/xx-xx	S302-F1/25/xx-2xx/xx-xx	570	400	170	17
3 digit	2 digit + dimension symbol				
S302-03/06/xx-2xx/xx-xx	S302-F2/06/xx-2xx/xx-xx	300 ³⁾	185	170	7 ³⁾
S302-03/10/xx-2xx/xx-xx	S302-F2/10/xx-2xx/xx-xx	480	245	170 (240)	12 (15)
S302-03/16/xx-2xx/xx-xx	S302-F2/16/xx-2xx/xx-xx	670	300	170 (240)	17 (19)
S302-03/25/xx-2xx/xx-xx	S302-F2/25/xx-2xx/xx-xx	1030	400	170	27
4 digit	3 digit + dimension symbol				
S302-04/06/xx-2xx/xx-xx	S302-F3/06/xx-2xx/xx-xx	300 ³⁾	185	170	7 ³⁾
S302-04/10/xx-2xx/xx-xx	S302-F3/10/xx-2xx/xx-xx	480	245	170 (240)	12 (15)
S302-04/16/xx-2xx/xx-xx	S302-F3/16/xx-2xx/xx-xx	670	300	170 (240)	17 (19)
S302-04/25/xx-2xx/xx-xx	S302-F3/25/xx-2xx/xx-xx	1030	400	170	27
5 digit	4 digit + dimension symbol				
S302-05/03/xx-2xx/xx-xx	-	300 ³⁾	185	170	7 ³⁾
S302-05/06/xx-2xx/xx-xx	S302-F4/06/xx-2xx/xx-xx	400	185	170	8
S302-05/10/xx-2xx/xx-xx	S302-F4/10/xx-2xx/xx-xx	680	245	170 (240)	15 (19)
S302-05/16/xx-2xx/xx-xx	S302-F4/16/xx-2xx/xx-xx	960	300	170 (240)	21 (26)
S302-05/25/xx-2xx/xx-xx	S302-F4/25/xx-2xx/xx-xx	1500	400	170	36
6 digit	5 digit + dimension symbol				
S302-06/03/xx-2xx/xx-xx	S302-F5/03/xx-2xx/xx-xx	300 ³⁾	185	170	7 ³⁾
S302-06/06/xx-2xx/xx-xx	S302-F5/06/xx-2xx/xx-xx	400	185	170	8
S302-06/10/xx-2xx/xx-xx	S302-F5/10/xx-2xx/xx-xx	680	245	170 (240)	15 (19)
S302-06/16/xx-2xx/xx-xx	S302-F5/16/xx-2xx/xx-xx	960	300	170 (240)	21 (27)
S302-06/25/xx-2xx/xx-xx	S302-F5/25/xx-2xx/xx-xx	1500	400	170	36
7 digit	6 digit + dimension symbol				
-	S302-F6/03/xx-2xx/xx-xx	300 ³⁾	185	170	7 ³⁾
S302-07/06/xx-2xx/xx-xx	S302-F6/06/xx-2xx/xx-xx	510	185	170	9
S302-07/10/xx-2xx/xx-xx	S302-F6/10/xx-2xx/xx-xx	870	245	170 (240)	18 (23)
S302-07/16/xx-2xx/xx-xx	S302-F6/16/xx-2xx/xx-xx	1100	300	170 (240)	24 (29)
S302-07/25/xx-2xx/xx-xx	S302-F6/25/xx-2xx/xx-xx	1730	400	170	42
8 digit	7 digit + dimension symbol				
S302-08/06/xx-2xx/xx-xx	S302-F7/06/xx-2xx/xx-xx	510	185	170	9
S302-08/10/xx-2xx/xx-xx	S302-F7/10/xx-2xx/xx-xx	870	245	170 (240)	18 (23)

¹⁾ The figures shown for weight are approximate.

²⁾ Units with Profibus interface: a = 480 mm, Weight = 12 (15) kg

³⁾ Units with Profibus interface or integrated heating: a = 400 mm, Weight = 8 kg;

Units with Profibus interface and integrated heating: a = 510 mm, Weight = 9 kg

() Values in round brackets are valid for LRD® versions.